ARGOS USER MANUAL



ARGOS MOBILE APP



EXPERIENCE THE ARGOS.




Canada ICES-003 (B) / NMB-003 (B)




QUICK START GUIDE


1. Fill machine with water to bottom of included funnel (1.5in / 3.5cm from top), then secure boiler cap.

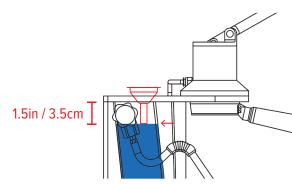


2. Turn on machine and set brew temperature. Wait for pulsing middle LED to turn solid after ~5 minutes.

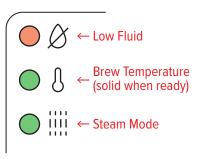

3. Pull lever, pausing halfway to allow air to bleed from the piston valve while the grouphead fills with water.

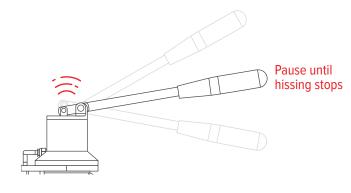

4. Press brew temp. dial inward to activate Steam Mode. Wait for brew temp. light to turn solid before steaming.

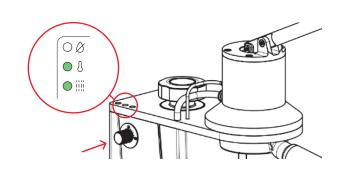

Symptoms of overfilling once machine is on and heated:

- Boiler pressure higher than 3 bars
- Inability for machine to reach target temp.
- Water leaking from bottom of machine

- Machine works best immediately after reaching brew temp.
- If not pulling shots in quick succession, it is best to turn machine off between shots
- Sleep mode will start 10 minutes after idling and all LEDs will pulse—turn machine off and back on to continue use

If bleed is too fast or slow, you may experience the following:

- Low extraction pressure
- Spongy feeling in lever
- Water flooding above piston
- For tips on mastering the bleed process, go to help.odysseyespresso.com or scan the QR code here

- Do not over-tighten steam wand knob
- Stop tightening when steam stops ~3/4 turn from tight
- Over-tightening will lead to leaks and require replacement of o-rings