



# QUICK START GUIDE

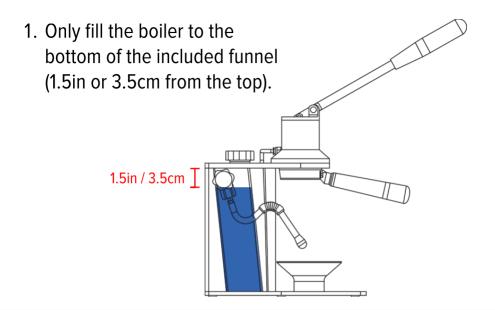

### Symptoms of overfilling:

- Boiler pressure higher than 3 bars
- Unable to reach target shot temp for first shot
- · Water leaking out of anti vacuum valve
- Water pooling at the bottom of the machine


2. Do not tighten the steam knob completely. Stop turning when steam discontinues ( $^{\sim 3}$ /4 turn from tight).

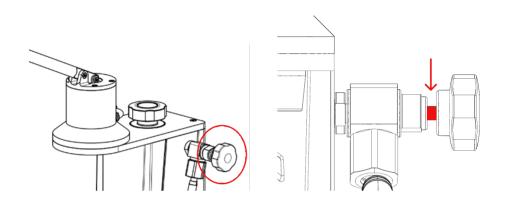

## Symptoms of over-tightening:

· Premature o-ring failure causing leaks


3. The machine works best immediately after reaching brew temperature ( $^{\sim}5$  minutes). If not pulling shots in quick succession (within a few minutes of each other) then it is best to turn the machine off between shots.

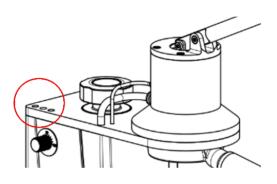

#### Sleep mode:

- · Starts 10 minutes after idling
- · All LEDs will be flashing
- Turn Argos off and back on to continue use

4. Only remove boiler cap with 0 bar pressure.

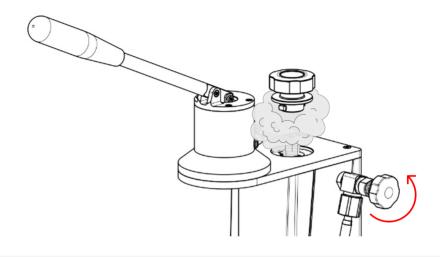

- Open steam wand to relieve pressure (be careful of hot steam)
- If refilling when machine is hot, use towel to remove boiler cap

# ARGOS USER MANUAL

















Canada ICES-003 (B) / NMB-003 (B)